

IIT Bombay Nanofabrication Facility

Tool Name: Microwriter ML 3

Standard Operating System (Version 2- March 2025)

INDEX

Contents

Tool's Overview	2
Checklist (Before starting the tool)	2
General safety: CAUTION	2
Cleaning	3
Operation environment	3
Starting the system	3
Loading wafers	4
Focusing the sample	5
Setting Current wafer properties	5
Preparing exposure pattern	6
Exposure	9
Removing wafers	10
2nd level Alignment	10
Sample Imaging	13
Surface profiler	14

Note regarding Version -2 March 2025: The changes/additions regarding overlay exposure procedure have been highlighted with yellow color in the "2nd level alignment" section.

Tool's Overview

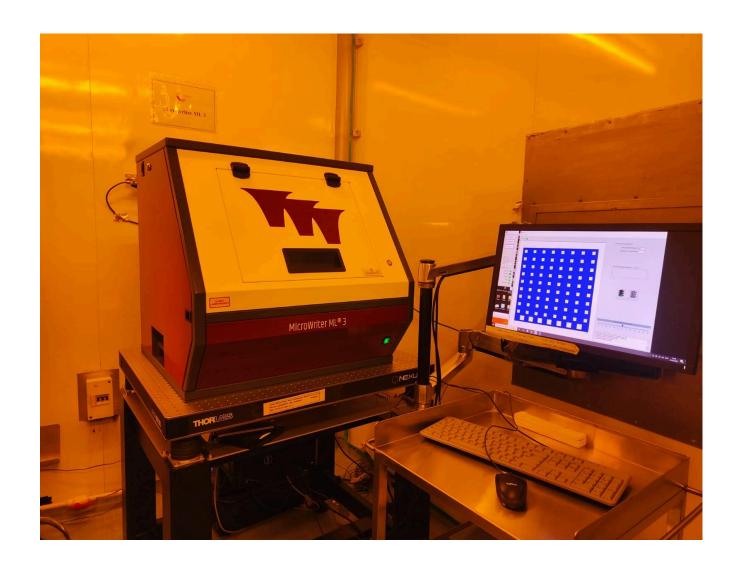


Fig.: Microwriter ML 3

General safety: CAUTION

1)	Do not place any heavy object on the instrument.
2)	Avoid severe impact or rough handling that leads to damaging the instrument.
3)	Only operate the instrument in accordance with the procedures given in this manual. Failure to do so may result in the protection provided by the equipment being impaired.
4)	Do not insert samples thicker than the maximum specified limit for the instrument.
5)	Do not increase camera magnification when the sample is not in focus.
6)	The front door presents a pinch point hazard – if the door is dropped from fully open it may injure hands or fingers. Do not allow the door to drop.

Hazardous ultraviolet light is accessible to the user if the interlocks are defeated or if any of
the locked panels of the environmental enclosure are removed. Do not disassemble the
instrument or operate it without all enclosure panels in place or with the door interlock
defeated unless you are qualified.

Cleaning

1)	Isolate from power supply before cleaning
2)	Use a soft cloth dampened in IPA . Do not spray any liquid.
3)	Do not use chemicals containing harsh solvents such as benzene, toluene, xylene, and acetone.

Operation environment

1)	Location: indoor, dust free, near-non-conductive pollution (degree 2 of EN61010-1:2010)
2)	Relative humidity 70% (no condensation)
3)	Altitude <2000m
4)	Temperature 5-40C

Starting the system

1. Switch on the power switch on the bottom right of the front panel of the environmental enclosure.



Start the computer.
 Log onto Windows
 Password (Micro3Writer)

The red door locked light may flash with varying speed while the instrument initialises its onboard electronics. In this case, wait until the light stops flashing. If there is no flashing, wait a minimum of 3 minutes.

4. Double-click on the 'MicroWriter ML' icon on the computer.



5. When the Toolbar comes up, check that all of the hardware status lights show light or dark green.

Green indicates OK;
Red indicates a problem.

Hardware status

Door closed

Door locked

Controller

Motors


Temperature

Loading wafers

1.	Check that the front door of the MicroWriter ML®3 is unlocked ('Lock' button extinguished).	
2.	If the door is locked ('Lock' button illuminated red) then press the 'Lock' button and wait for it to stop flashing.	
3.	Open the front door.	
4.	Place the wafer onto the stage, centred as well as possible.	

You may add a small drop of DI water on the backside of your sample to enhance the adhesion of the wafer to the chuck.

Focusing the sample

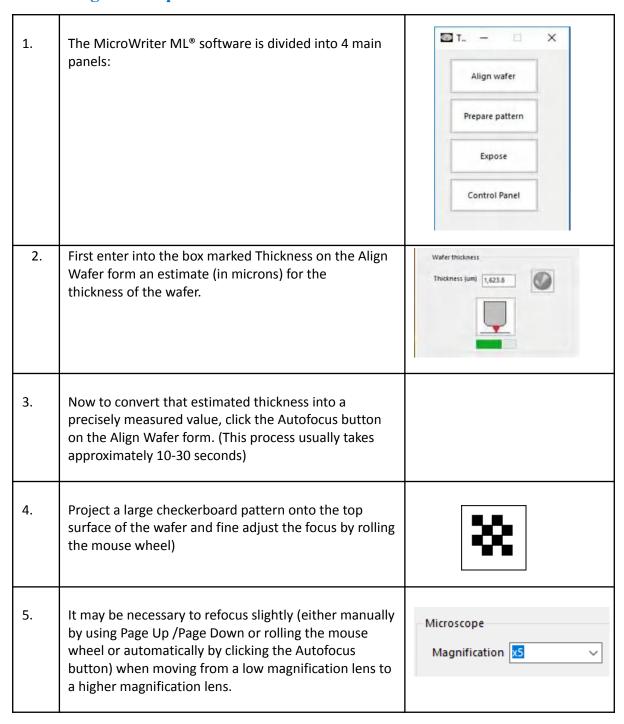

Setting Current wafer properties

1. Click on the wafer tab on the Align wafer panel.
Then choose the current wafer properties option in it.

Align wafer


2. Enter the relevant wafer shape and then enter its size.


-By setting the width and depth dimensions in case of square/rectangular shaped samples or -By setting diameter in case of circular shaped samples

3. Set an edge exclusion value. This will reduce the effective size of the wafer further. This is useful where there is a bevel or resist edge bead atthe edge of the wafer.

Please make sure that you feed the exact shape and size of the sample in the current wafer properties. For small sized wafers it's always recommended to have rectangular and square shaped sizes.


Preparing exposure pattern

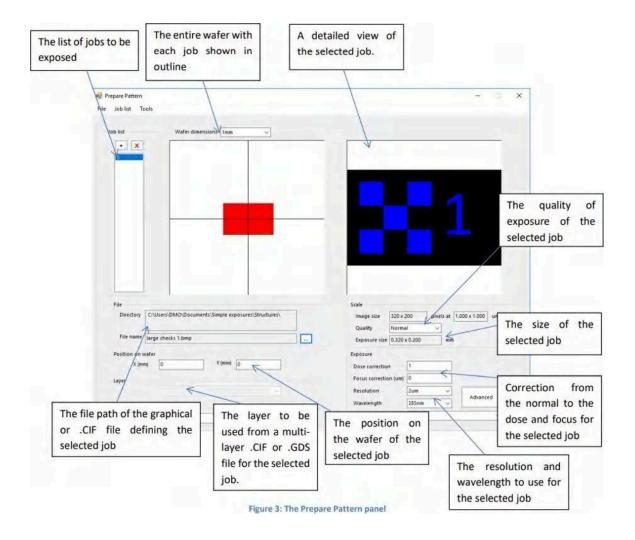


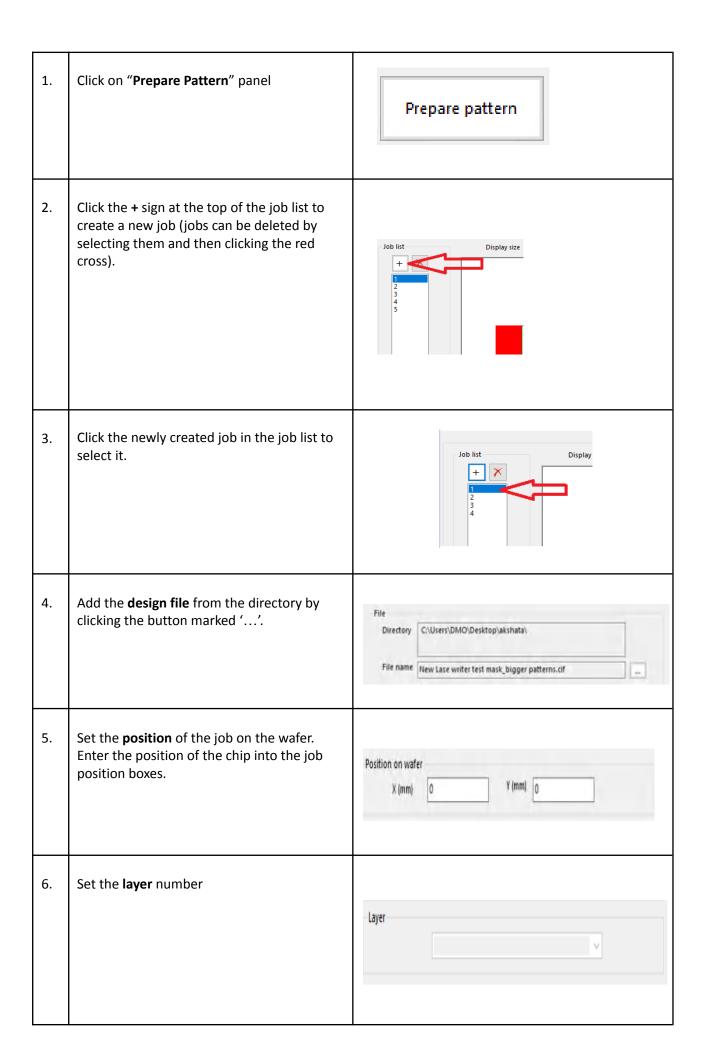

For CIF and GDS files a given job can only access one layer. To expose multiple layers from the same CIF or GDS2 file, you will need to create a new job for each layer and give them all the same position and file name. 7. Set the **exposure quality**, chosen from Fastest, Normal, High, Super or Native. It is recommended that **Normal** quality is used the first time a new pattern is being exposed. Keep "Dose correction" equal "1. 8. Scale 9. Keep "Focus correction" equal "0" that is Quality provided by the autofocus mechanism. Fastest Exposure size Exposure Dose correction Focus correction (um) 0 10. Set the desired **optical resolution**. This will Resolution 2um Advanced determine which objective lens is selected Wavelength during the Exposure mode exposure. The larger the optical resolution value, the faster the exposure. Exposure size 3.820 x 0.917 Exposure Dose correction Focus correction (um) Exposure size 3.820 x 0.917 Focus correction (um) Resolution Wavelength Exposure mode Quality Exposure size 3.820 x 0.917 Exposure Resolution 2um 385nm Wavelength Exposure mode

Exposure

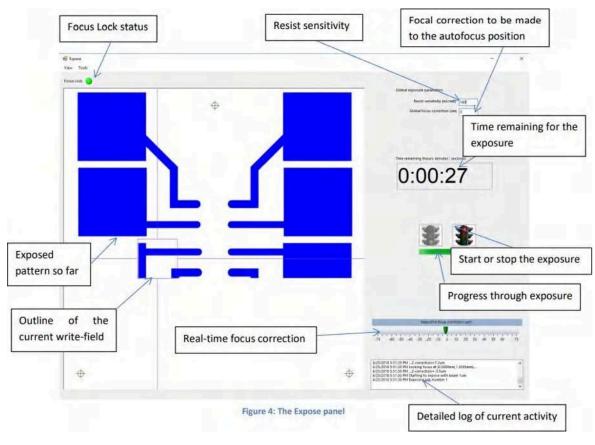

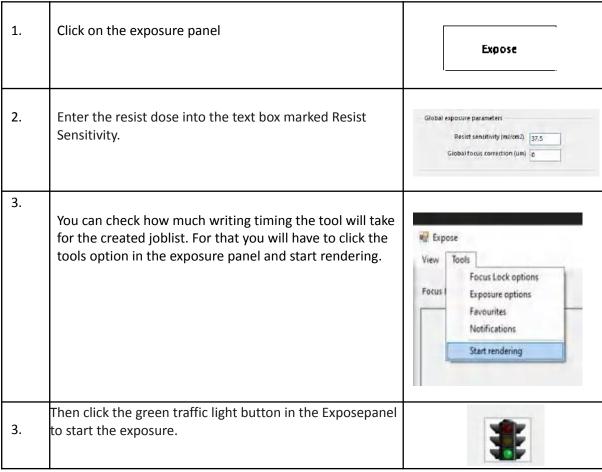


4.	A count-down timer shows an estimate of the timing remaining and a progress bar shows progress through the complete exposure	Time remaining (hours: minutes: seconds) 0:02:10
5.	After exposure is completed, a message "finished" will be displayed in the log located at the bottom left corner of the screen.	27/02/003 11:59:15 Exposing job number 3 at 405nm 27/02/003 11:59:36 Exposing job number 4 at 405nm 27/02/003 11:59:36 Taylong young 27/02/003 11:59:59 Taylong young 27/02/003 12:00:16 Finished.


Removing wafers


1.	As soon as the exposure is complete you can remove the wafer. Unlock the door by pressing the 'Lock' button.	
2)	Open the front door of the enclosure	
3)	Remove the wafer and close the door again.	

2nd level Alignment

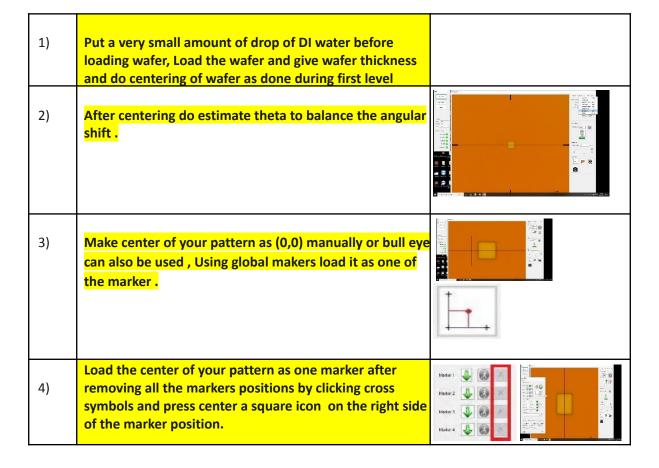

5)	Remove all the markers positions again by clicking cross symbols	Marker 3
_		
6)	Navigate to the first marker Enter marker 1 in "marker actual position" Window, by clicking on the arrow mark	
7)	Type marker coordinates from the first design file in "Marker expected positions" window	

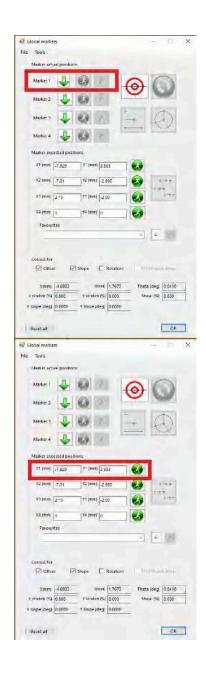

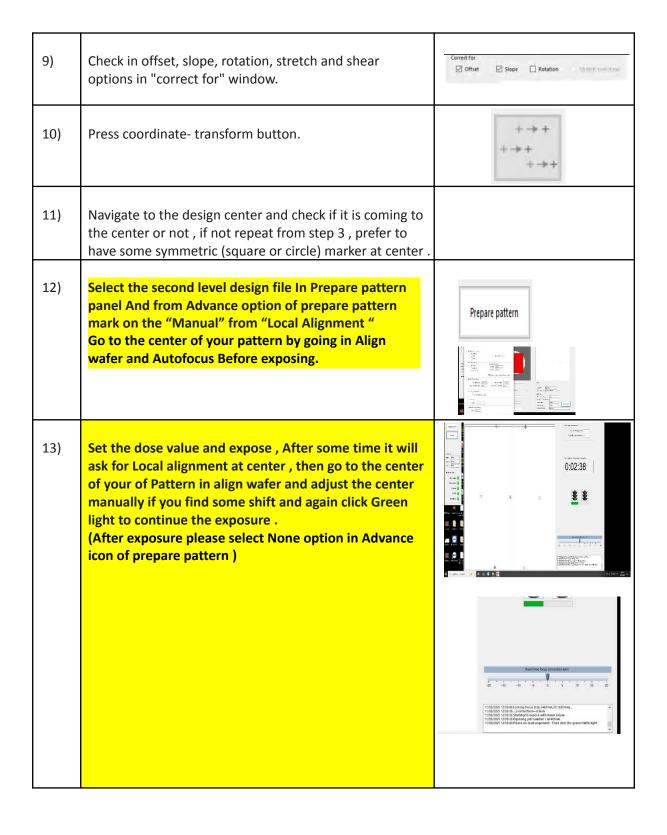

Sample Imaging

1)	Load the wafer	
2)	Find the pattern, by putting the X and Y coordinate of the pattern in the "Manual stage control" window	Manual stage control X (mm) 2.6715 Y (mm) -1.7972 Theta (deg) 0.0410
3)	Double click (the left button of the mouse) on the centre of the device that you want to image	
4)	Increase the magnification and simultaneously focus the device.	Microscope Magnification x20 ✓ ✓ x4
5)	You can click on x4 option to get a maximum magnified image of the device.	Min Max Lamp
6)	To measure the device left click on one edge of the device - right click and choose measure option - left click on other edge of the device	
7)	If you want to take an image with measurement. Press the Prt sc option on the keypad and save the file.	
8)	If you only need an image of the device (no measurement) then press the snapshot option.	0

Surface profiler



1)	Open the Align wafer panel
2)	Focus the real-time microscope onto the area of the sample you wish to profile.
3)	Click on the tools tab (top right hand side corner).
4)	Open the Surface profiler window (see Figure 25).
5)	Enter an estimate for the total thickness range to be profiled in the Thickness range box.
6)	Click the green traffic light.
7)	The system will spend several minutes analysing the surface height.

8)	Once completed, the real-time microscope window will show a false colour image, with red being the lowest parts of the surface and white being the highest parts.
9)	The numerical data in the profile can be exported as a text file via the File menu for opening in 3-D rendering packages such as NIH ImageJ.
10)	Single clicking the microscope image plots the thickness profile along an X or Y line passing through the clicked point (shown in blue on the microscope image).
11)	Step heights can be measured using the cursors in the Surface profiler window. Double click the profile graph to reset them, and then drag them to make measurements.
12)	Closing the Surface Profiler tool reverts the real-time microscope image to its normal contrast image mode.

_